



HENRY®

Made In America, Or Not Made At All

HenryUSA™

Henry H015 Single Shot Rifle

Instruction Manual For All H015 Series Rifles



Important:

Study this instruction manual carefully before you handle this firearm.



HENRY

Made In America, Or Not Made At All

IS A REGISTERED TRADEMARK
OF THE HENRY REPEATING ARMS COMPANY

TEL. **201-858-4400** | FAX. **201-858-4435**

WEBSITE. **www.henryusa.com**

Made in America



WARNING: BEFORE USING FIREARM, READ AND FOLLOW THESE INSTRUCTIONS.

If there is anything you do not understand,
get help from someone qualified to teach the safe handling of firearms.

THE HENRY GUARANTEE

Thank you very much for spending your hard earned money to purchase a Henry. I certainly appreciate it and welcome you to the Henry family. As an owner of a Henry, you are backed by our lifetime warranty and my personal guarantee for 100% satisfaction. I will do what it takes to make certain you are happy with your purchase.



Sincerely,

Anthony Imperato

Henry Repeating Arms

Telephone: 201.858.4400

Web: www.henryusa.com

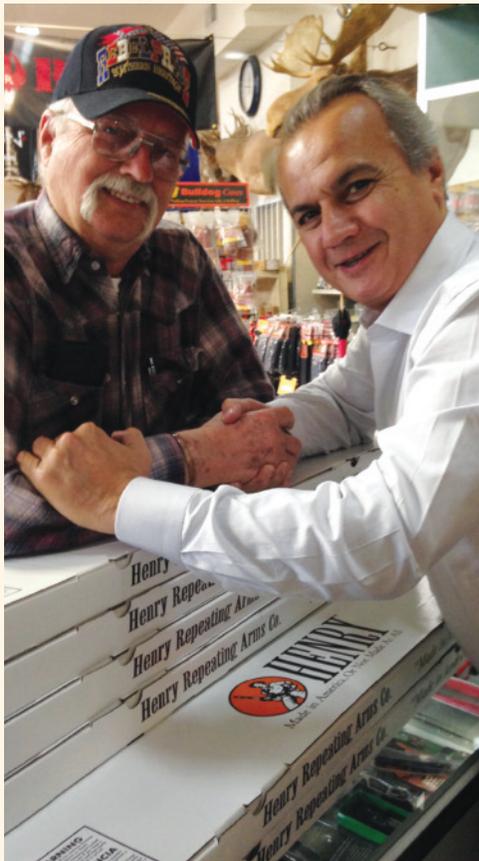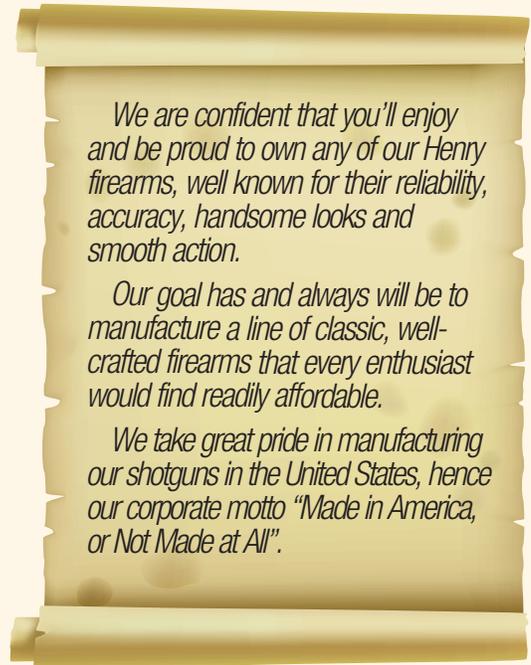

HENRY[®]
Made In America,
Or Not Made At All

Use the space below to record information about your new firearm.

Serial Number _____

Caliber _____

Purchase Price _____

Purchased From _____

Date of Purchase _____

Henry Repeating Arms Company
59 East 1st Street
Bayonne, NJ 07002

If you have any questions or comments regarding your new Henry firearm, please feel free to write or call us.

SIMPLE LIMITED LIFETIME WARRANTY ON ALL HENRY FIREARMS

It is our promise to you that as long as you own your Henry firearm, it will be free from defects in material and workmanship from the manufacturer. If you have a problem with your Henry firearm, we will fix it at no charge to you. Henry Repeating Arms shall repair, send replacement parts or replace the firearm with a valid warranty claim. If a complete replacement is necessary, the original firearm will not be returned. Henry RAC will provide repairs or replacement at no charge, but will not offer cash, credit, or refund.

WE RESERVE THE RIGHT TO REFUSE SERVICE ON FIREARMS THAT HAVE BEEN ALTERED, ADDED TO, OR SUBSTANTIALLY CHANGED. Removal of metal from the barrel, or modifications of the firing mechanism and/or operating parts, may lead to a refusal of service on such firearms. There will be a charge for parts and labor to return the firearm to original specifications.

DO NOT, UNDER ANY CIRCUMSTANCES, ALTER THE TRIGGER, "SAFETY" OR OTHER PARTS OF FIRING MECHANISM OF THIS OR ANY OTHER FIREARM. FAILURE TO OBEY THIS WARNING MAY RESULT IN INJURY OR DEATH.

NOTICE: Henry RAC shall not be responsible for injury, death, or damage to property resulting from either intentional or accidental discharge of this firearm, or from its function when used for purposes or subjected to treatment for which it is not designed.

Whether or not you are experienced in the safe handling of firearms, we urge you to read this entire instruction manual carefully. You must follow the safety instructions for your safety and the safety of others. Should you have any questions concerning the instructions in this manual, please call us at 201-858-4400.

WARNING: If you have little or no experience in the safe handling and operation of a firearm, we strongly urge you to take a firearms safety course from an NRA Certified Instructor or someone with equivalent qualifications before using this or any other firearm. You can contact the NRA Firearms Education and Safety Division at 703-267-1470 for the name of an instructor in your area, or contact your firearms dealer, law enforcement agency or local sportsman's club for training.

Table of Contents

Gun Safety and Handling	4
Terminology	5
Specs	6
Ammunition	6
Shooting Cautions	7
Operating Instructions	
How To Use the Safety	8
Maintenance Before Use	8
How To Load Your Henry	8
How To Shoot Your Henry	9
How To Unload Your Henry	9
How To Adjust Your Sights	9
Malfunction	10
Cleaning, Maintenance & Storage	
How To Clean Your Henry	11
Field Stripping Your Henry	11
Maintenance Before Storage	13
Storage Safety	13
Gun Parts	14
Service and Repair	16
Socialize	17
History and Thank You	17

GENERAL GUN SAFETY HANDLING

Apply the following safety rules in every situation, with any kind of firearm:

ALWAYS TREAT EVERY FIREARM AS IF IT IS LOADED AND WILL FIRE. Do not take anyone's word that the firearm is unloaded - always check for yourself. Never pass your firearm to another person until the cylinder or action is open and you visually check that it is unloaded. Keep your firearm unloaded and safely stored when not in use.

ALWAYS BE SURE OF YOUR TARGET AND WHAT IS BEYOND. A bullet could travel through or past your target for up to 1 ½ miles. Always be sure your backstop is adequate to stop and contain bullets before beginning target practice so that you do not hit anything outside the range shooting area. If in doubt, don't shoot! Do not fire randomly into the sky.

NEVER SHOOT ACROSS A HIGHWAY OR ANOTHER ROADWAY.

ALWAYS POINT YOUR FIREARM IN A SAFE DIRECTION. NEVER point a firearm at anyone or anything you do not intend to shoot whether or not it is loaded. This is particularly important when loading, unloading, or field stripping the firearm. ALWAYS control the direction of the firearm; if it fires accidentally, injury, death, or damage to property can be avoided.

NEVER PLACE YOUR FINGER INSIDE THE TRIGGER GUARD OR ON THE TRIGGER UNLESS YOU INTEND TO FIRE. You should also take care to ensure that other objects do not touch the trigger.

NEVER USE ALCOHOL OR DRUGS BEFORE OR WHILE SHOOTING. Your vision, motor skills and judgment could be dangerously impaired, making your gun handling unsafe to you and to others. Further, do not use your firearm if you are on any medication which impairs, even slightly, your mental or physical ability.

ALWAYS SEEK A DOCTOR'S ADVICE IF YOU ARE TAKING MEDICATION. Be sure you are fit to shoot and handle your firearm safely.

NEVER SHOOT AT A HARD SURFACE SUCH AS A ROCK OR A LIQUID SURFACE SUCH AS WATER. A bullet may ricochet and travel in any direction to strike you or an object you cannot see, causing injury, death or damage to property.

NEVER DISCHARGE A FIREARM NEAR FLAMMABLE MATERIAL. Flame and sparks erupt from the firearm when discharged. They could start a fire or cause flammable liquids to explode.

ALWAYS BE AWARE OF POSSIBLE RISK FROM DROPPING YOUR FIREARM. Some parts of the mechanism could be damaged. You may not see the damage, but it could be severe. The firearm may discharge and cause injury, death, or damage to property. If your firearm has been dropped, have it examined by a competent gunsmith before using it again.

ALWAYS KEEP AND CARRY YOUR FIREARM EMPTY WITH THE HAMMER IN THE "SAFE" POSITION except when you intend to shoot, so that your firearm cannot be fired when you do not intend to fire it.

NEVER CROSS OBSTACLES SUCH AS FENCES OR STREAMS WITH A LOADED FIREARM. Always make certain your firearm is unloaded before crossing a fence, climbing a tree, jumping a ditch or approaching other obstacles.

NEVER TRANSPORT A LOADED FIREARM. Keep all firearms unloaded during transport, even when stored in a holster, gun case, scabbard or other container.

NEVER WALK, CLIMB, OR FOLLOW A COMPANION WITH YOUR FIREARM COCKED AND READY TO FIRE. When hunting, hold your firearm so that you can always control the direction of the muzzle.

NEVER LEAVE A LOADED FIREARM UNATTENDED. Someone, especially a child, may fire it and cause injury, death, or damage to property.

ALWAYS INSTRUCT CHILDREN AND NON SHOOTERS TO RESPECT FIREARMS. If you teach your children to shoot or get them trained by a qualified instructor, be certain they know how to use the firearm properly and always supervise them closely. Always stress safety so that your children or others will not fire a shotgun when or where it is unsafe to do so.

TERMINOLOGY AND DESCRIPTIONS

Congratulations on your purchase of your Henry Single Shot Rifle (H015 models).


Available with matte finish on steel frames and a highly polished finish on hardened brass frames, these rifles feature 22" round barrels, a drilled and tapped provision for optional scope use, a curved pistol grip wrist and solid rubber recoil pad on the steel versions; a straight English wrist and brass buttplate on the brass rifles and a non-ejecting case extractor.

The calibers include .223, 243, .308, .357, .30-30, .44 Magnum, .44 Spl, .45-70, .350 and .450; and in brass .44 Magnum, .44 Spl. and .45-70.

SERIAL NUMBER

The serial number is located on the top of the receiver. Record this number in this manual for future reference.

HENRY SINGLE SHOT RIFLE (BLUED STEEL AND BRASS)

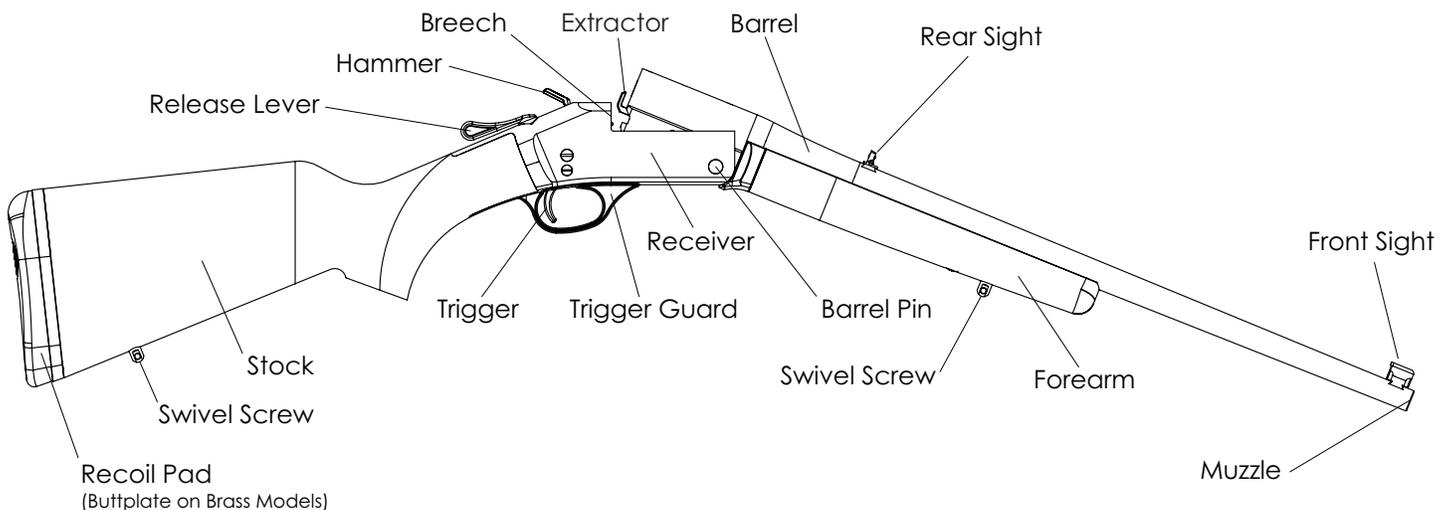

SPECS

Action Type

Single Shot Rifle

Caliber

H015-223 - .223 Rem
H015-243 - .243 Win
H015B-243 - .243 Win
H015Y-243 - .243 Win
H015-308 - .308 Win
H015-3030 - .30-30
H015-350 - .350 Legend
H015-450 - .450 Bushmaster
H015-357 - .357 Magnum/.38 Spl
H015B-357 - .357 Magnum/.38 Spl
H015-44 - .44 Magnum/.44 Sp
H015B-44 - .44 Magnum/.44 Spl
H015-4570 - .45-70
H015B-4570 - .45-70

Capacity

1 Round

Barrel Length/Type

22" Round Blued Steel

Rate of Twist

H015-223 – 1:9
H015-243/H015B-243 – 1:10
H015Y-243 - 1:10
H015-308 – 1:10
H015-3030 - 1:12
H015-350 - 1:16
H015-450 - 1:24
H015-44/ H015B-44 – 1:20
H015-4570/H015B-4570 – 1:20
H015-357/H015B-357 - 1:16

Overall Length

37.5"
H015Y-243 - 36.5"

Weight

6.88lbs - 7.37 lbs

Receiver Finish

H015-223/243/308/44/4570/
3030/357/350/450, H015Y-243 -
Blued Steel
H015B-44/4570/357/243 -
Polished Brass

Rear Sight

Fully Adjustable Folding Leaf

Front Sight

Brass Bead

Scopeability

Drilled and Tapped for Weaver 82

Stock

H015-223/243/308/44/4570/
3030/357/350/450, H015Y-243 -
American Walnut Pistol Grip
H015B-44/4570/357 -
American Walnut Straight Grip

Buttplate/pad

H015-223/243/308/44/4570/
3030/357/350/450, H015Y-243 -
Black Solid Rubber Recoil Pad
H015B-44/4570/357/243 - Brass

Length of Pull

14"
H015Y-243 -13"

Safety

Rebounding Hammer

AMMUNITION

Your Henry Single Shot Rifle uses a release lever on top of the frame, behind the external hammer spur, to break the barrel open. The release lever can be pivoted either left or right from its center position to unlock it for loading. Be sure to use the ammunition particular to your purchased firearm. The Single Shot Rifle comes in the following calibers:

.223 Rem/5.56 NATO	.30-30
.243 Win	.357 Magnum/.38 Spl
.308 Win	.350 Legend
.44 Mag/.44 Spl	.450 Bushmaster
.45-70	



THE CALIBER OF YOUR NEW H015 SINGLE SHOT RIFLE IS INSCRIBED ON THE BARREL NEAR THE RECEIVER.

ALWAYS HAVE ADEQUATE VENTILATION IN THE AREA THAT YOU DISCHARGE A FIREARM. LEAD EXPOSURE CAN OCCUR FROM DISCHARGING FIREARMS IN POORLY VENTILATED AREAS, CLEANING FIREARMS OR HANDLING AMMUNITION.

Lead is a substance that has been known to cause birth defects, reproductive harm and other serious injury. Wash hands thoroughly after exposure.

AMMUNITION SELECTION

ALWAYS USE THE CORRECT AMMUNITION FOR YOUR PARTICULAR FIREARM. Henry Repeating Arms Firearms are designed to function with a variety of brands and types of factory manufactured ammunition in the appropriate caliber, but not all ammunition produces the same result. Be sure the only ammunition you carry correctly matches the gauge or caliber you are shooting. Never use non-standard, reloaded, or "hand-loaded" ammunition which has not been subjected to internal ballistic pressure testing. Henry RAC recommends that after you read and understand this manual, you go to the range and fire different ammunition which is appropriate to the caliber of your firearm. Once you find the ammunition which functions best, keep using it.

RANGE AND SHOOTING CAUTIONS

ALWAYS DESIGNATE A KNOWLEDGEABLE AND RESPONSIBLE PERSON TO BE IN CHARGE TO MAINTAIN SAFETY CONTROL WHEN A GROUP IS FIRING ON A RANGE. Obey their commands so that discipline is maintained to reduce the possibility of accidents.

ALWAYS CARRY YOUR FIREARM EMPTY WITH THE ACTION OPEN WHILE ON A RANGE until preparing to fire and keep it pointing towards the backstop when loading, firing, and unloading to eliminate the risk of injury, death or damage to property.

ALWAYS KEEP THE HAMMER IN THE UNCOCKED POSITION UNTIL YOU ARE READY TO FIRE. This will minimize the risk of an accidental discharge.


ALWAYS WEAR EYE AND EAR PROTECTION SPECIFIED FOR USE WITH FIREARMS. Flying particles could damage eyes and cause blindness. Without ear protection, the noise of even one shot from your shotgun and from other guns close to you could leave a "ringing" in the ears for some time after firing and the cumulative long term effect could be permanent hearing loss. Make sure others in the vicinity of where you are shooting are doing so as well.

ALWAYS KEEP CLEAR AND KEEP OTHERS CLEAR OF THE EJECTION PORT. Spent shells are ejected with enough force to cause injury. The ejection port must also be unobstructed by your hand to insure safe ejection of spent rounds. Never place fingers in ejection port - they could be burned by hot metal or injured by the bolt moving forward.

NEVER PUT YOUR FINGER INSIDE THE TRIGGER GUARD UNTIL YOU ARE AIMING AT A TARGET AND READY TO SHOOT. This will prevent you from firing the firearm when it is pointing in an unsafe direction.

NEVER JOKE AROUND OR ENGAGE IN "HORSEPLAY" WHILE HANDLING YOUR FIREARM. Doing so could cause an accidental discharge.



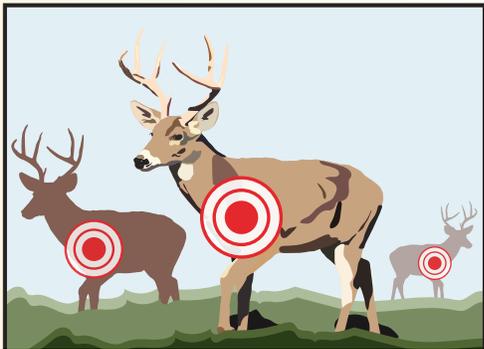

REBOUNding HAMMER SAFETY

The action has no external manual safety; it uses a rebounding hammer that cannot touch the firing pin unless the trigger's deliberately pulled, and an interlock system that does not allow the barrel to open if the hammer is cocked. The barrel will also not close if the hammer's cocked while it is open. Safe to carry, and simple to operate.

Keep your thumb on the hammer as you pull the trigger. As soon as you feel the hammer exerting forward pressure against your thumb, remove your finger from the trigger and ease the hammer slowly forward to the Rebound/Safety position.

If you do not have a full understanding of how the safety system works, please call us immediately at 201-858-4400 and ask for technical assistance.

MAINTENANCE BEFORE USE

Before using your firearm for the first time, it should be cleaned. (See the cleaning instructions.) Your firearm was treated at the factory with either a preservative or oil to protect it against corrosion during shipping and storage. Preservative and oil should be wiped from the bore, chamber and exposed areas using a clean swab or patch before using the firearm. Purchase cleaning supplies that are specifically designated for your type and caliber of firearm. Many suppliers offer these in kit form for your convenience. Follow the instructions provided with your cleaning supplies. Whenever your firearm has been exposed to sand, dust, extreme humidity, water or other adverse conditions, it should be cleaned and lubricated.

HOW TO LOAD YOUR HENRY SINGLE SHOT RIFLE

Prior to loading your rifle, make certain to point the muzzle in a safe direction.

We recommend that you always load a completely unloaded firearm, and clear the firearm of any cartridges prior to loading. Make certain that the barrel, receiver and chamber are free from any obstruction.

Make sure to select the correct ammunition for your rifle. The caliber is listed on the barrel.

Be sure the hammer on your firearm is not cocked. Henry's interlock system does not allow the action to open if the hammer is cocked. The barrel will also not close if the hammer's cocked while it is open.

Your break-action firearm uses a release lever on top of the frame, behind the external hammer spur to break open for loading and unloading. This lever can be pivoted left or right from its center position to unlock, which

works well for both right and left-handing. The barrel will swing open on a hinge, “breaking” the gun and exposing the breech so you can load and unload the weapon.

Once loaded, swing the barrel back into place. Your firearm is now loaded.

HOW TO SHOOT YOUR HENRY SINGLE SHOT RIFLE

If you want to fire the gun, bring the hammer back to the cocked position, aim in a safe direction at your target, and pull the trigger.

HOW TO UNLOAD YOUR HENRY SINGLE SHOT RIFLE

As with loading, be sure the hammer on your firearm is not cocked. Henry's interlock system does not allow the action to open if the hammer is cocked.

The H015 single shot rifle uses an extractor. Upon opening the action, the extractor will push the spent brass casing partially out of the chamber. It can then be removed manually.

SIGHTS AND SIGHT ADJUSTMENTS

Your H015 model Single Shot Center-fire Rifle is equipped with a fully adjustable folding leaf rear sight, and brass bead front sight. It is drilled and tapped to accommodate scope mounts such as the Henry Talley Ring Set or a Henry EGW Picatinny Rail (found on www.henrypride.com).


The Folding Leaf Rear Sight is designed to fold down flat against the barrel on a rifle where another sight system, such as a scope, may also be used. The height adjustable sight notch piece, has a hand painted white enamel diamond that helps draw your eye to the center of the notch.

HIGH OR LOW (ELEVATION ADJUSTMENT)

Elevation adjustments are modified by raising or lowering the white diamond insert in the rear sight.

Loosen the screw to the right of the white diamond, raise or lower as needed to correct elevation, then re-tighten the screw.

In order to shoot higher, you need to raise the insert; if you want to shoot lower, then lower the insert.

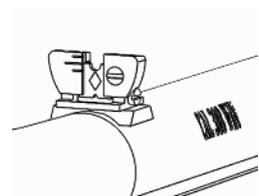

LEFT OR RIGHT (WINDAGE ADJUSTMENT)

To adjust for windage (left/right), the rear sight can be moved left/right as desired by turning the screw on the side of the rear sight.

If you want to shoot more to the right, turn the screw clockwise so the sight moves to the right. If you want to shoot more to the left, turn the screw counter clockwise so the sight moves to left.



MALFUNCTION AND TROUBLESHOOTING

NEVER USE YOUR FIREARM IF IT FAILS TO FUNCTION PROPERLY, AND NEVER FORCE A JAMMED ACTION. Forcing the action could make the round explode, causing serious injury, possible death, or severe damage to your firearm or other property.

FAILURE TO FIRE. A misfire occurs when the firing pin strikes the primer and it does not fire. **IF THE FIREARM FAILS TO FIRE DO NOT PUT IT DOWN OR OPEN THE ACTION. ALWAYS HOLD THE FIREARM, KEEPING IT POINTED IN A SAFE DIRECTION AND WAIT 30 SECONDS. IF A HANGFIRE (SLOW IGNITION) HAS OCCURRED, THE ROUND WILL FIRE WITHIN 30 SECONDS.**

If the round does not fire, remove the ammunition and examine the cartridge. If the firing pin indent on the primer is light or non-existent, have the firearm examined by a competent gunsmith before firing again. If the firing pin indent on the rim appears normal (in comparison with similar previously fired rounds) assume you have faulty ammunition. Discard and reload.

CLEANING, STORAGE AND MAINTENANCE

CLEANING SAFETY PRECAUTIONS

WARNING: BEFORE PERFORMING CLEANING PROCEDURES, MAKE SURE THE HAMMER IS IN THE FIRED-DOWN POSITION, WHICH ALLOWS YOUR REBOUNDING HAMMER SAFETY TO FUNCTION AS DESIGNED. OPEN THE ACTION AND MAKE CERTAIN YOUR FIREARM IS COMPLETELY UNLOADED. KEEP THE MUZZLE POINTED IN A SAFE DIRECTION. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY OR DEATH.

KEEP ALL AMMUNITION AWAY FROM THE CLEANING AREA. NEVER TEST THE MECHANICAL FUNCTION OF YOUR RIFLE WITH LIVE AMMUNITION. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY OR DEATH.

NOTICE! It is very important that the chambers of your rifle be cleaned thoroughly and promptly after shooting. Do not leave discharged (empty) shells in the chambers for any length of time, as the chemical composition of many cartridges contain moisture which can “sweat” out of the shell and onto the chambers’ surfaces, and possibly cause corrosion and rust.

HOW TO CLEAN YOUR HENRY RIFLE

DO NOT USE AN AGGRESSIVE SOLVENT ON THE RECEIVER COVER. WE SUGGEST THAT YOU USE BIRCHWOOD CASEY GUN SHEATH OR A MILD SOLVENT SUCH AS HOPPE'S NO. 9, KLEENBORE OR BREAKFREE.

Regular cleaning is important in order for your gun to operate correctly and safely. Taking proper care of it will also maintain its value and extend its life. Your gun should be cleaned every time it is used.

In order to clean it, we suggest that you first open the action by pivoting the release lever left or right from its center position to unlock it. The barrel will swing open on a hinge, "breaking" the gun. Using a brand name cleaning kit, run the cleaning rod down the bore from the breech towards the muzzle.

Note: Use a brand name cleaning kit and clean the bore from the breech end. Then clean the bolt and oil it before replacing. To reassemble, simply do the reverse.

FIELD STRIPPING YOUR SINGLE SHOT RIFLE

NOTICE! DO NOT ATTEMPT TO TAKE YOUR FIREARM APART FURTHER THAN EXPLAINED IN THIS MANUAL. Your firearm is a specialized, finely fitted mechanism. You may permanently damage it by attempting to disassemble the inner mechanisms. If further disassembly for service or cleaning is required, take your firearm to a qualified gunsmith.

A gun brought out of prolonged storage should also be cleaned before shooting. Accumulated moisture and dirt, or solidified grease and oil, can prevent the gun from operating properly.

We recommend the use of pull through cleaning kits or cleaning with a rod type kit. Overtime, depending on the amount of use and how it is stored, we do recommend that you take your Henry Rifle to a gunsmith to have it inspected at which time it can also be cleaned more thoroughly.

ALWAYS CLEAN FROM THE NATURAL DIRECTION OF THE BULLET. When you fire your gun, the powder residue and dirt are in the barrel. The chamber and receiver are clean. If you run a brush or patch from the muzzle end you will push this dirt, residue, and moisture into the chamber and receiver. This is a major cause of stuck cases or problems. If you push or pull a brush back toward the chamber, you will notice the brush will throw the debris from the bore back into the chamber.

You do not have to disassemble this firearm in order to clean it sufficiently and to keep it operating properly.



NEVER GO BACK AND FORTH REVERSING THE BRUSH. This will bend the bristles on the brush. This is the equivalent of bending a wire back and forth until it breaks. You will always ruin a brush if you reverse it while in the bore.

USE ONLY A FEW DROPS OF SOLVENT/LUBRICANT OIL. Use only the amount of solvent that the patch will absorb. If you use too much, the solvent or oil will drip down into the trigger mechanism; this will cause a gummy trigger. If you use too much oil, it will drain back toward the stock and could cause premature failure of the wood.

CENTER THE TOP AND ROD. BE CAREFUL NOT TO LET EITHER RUB THE BORE. All firearms record their history. This is the reason most people look down the barrel of a firearm. An experienced eye can tell the method of cleaning, the number of shots, and the gun maintenance applied to the firearm. Many marks are caused by people who carelessly let the tip or rod rub the inside the barrel.


USE A CLEAN PATCH SURFACE EACH TIME YOU GO DOWN THE BARREL. When you are using your firearm you will get abrasive dirt in the muzzle. The patch with solvent will flush this dirt out in the shortest distance. If you use this patch surface again, the dirt will be deposited in the chamber and neck. The next bullet down the barrel picks up this dirt and erodes the throat. This is the exact equivalent of cleaning in the wrong direction.

NEVER RUN A BRUSH IN THE BARREL FIRST. This will damage the firearm. The brush will pick up dirt, moisture or powder residue and deposit it into the chamber or receiver. Never dip a brush in solvent. The solvent at the brush core will collect dirt and drop it into the receiver and chamber.


Remember - Rust is neglect. Make sure all exposed metal surfaces are coated with a film of oil. After being subjected to damp weather, thoroughly wipe the bore and metal surfaces. Then apply a new film of oil. If

FIELD STRIPPING YOUR HENRY H015 SINGLE SHOT RIFLE OR SHOTGUN


ALWAYS MAKE SURE THE MUZZLE IS POINTED IN A SAFE DIRECTION!

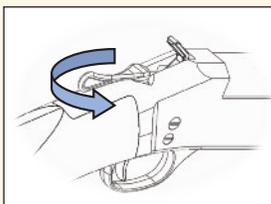

1) With the hammer in the resting position, open the action to verify that the chamber is empty.

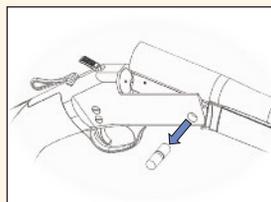

2) Remove the pivot pin by tapping it out with a 3/8" diameter or smaller wooden, brass, or plastic dowel or rod. This can be done from either direction.

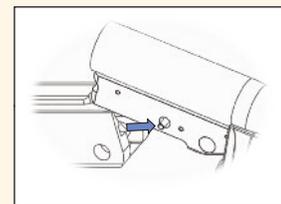

3) Remove the barrel assembly from the receiver assembly. The ejector/extractor release pin needs to pass cleanly through the slots in either side of the receiver. To reassemble, reverse these steps, making sure that you check for proper functioning of the action, hammer, and trigger mechanisms prior to loading and firing.

exposed to a soaking rain, snow or salt spray, a more thorough cleaning and oiling may be necessary.

Make certain to thoroughly clean your firearm when finished with firing. We suggest that you purchase a name brand, top quality cleaning kit.

MAINTENANCE BEFORE STORAGE

When storing your firearm, do not encase it in anything that will attract or hold moisture, for example, leather or heavy cloth. Also, do not store firearms with a plug inserted in the barrel because this can be a contributing factor to moisture accumulation.

If your firearm is to be stored for an extended period, the bore, chamber and internal surfaces should be oiled with a high-quality lubricating oil or preservative intended for firearms. The external parts; receiver, bolt and barrel should be coated with an anti-rust oil.

Before using your firearm again, be sure to clean it. Every time you clean your firearm, check it for signs of wear. If wear is noted, do not use the firearm, have it checked by a qualified gunsmith.

Make sure your firearm is in good mechanical condition before firing it. Periodically have your firearm checked for signs of erosion, cracking, or wear by the factory or a factory certified gunsmith.

STORAGE SAFETY AND PRECAUTIONS

NEVER LOCK A LOADED FIREARM AND NEVER LOAD A LOCKED FIREARM!

ALWAYS CHECK TO MAKE SURE YOUR FIREARM IS NOT LOADED BEFORE CLEANING, STORING, TRANSPORTING IT, LAYING IT DOWN, OR HANDING IT TO ANOTHER PERSON so that it cannot be fired when it is unsafe to do so.

ALWAYS KEEP AND STORE YOUR FIREARM AND AMMUNITION IN SEPARATE, LOCKED LOCATIONS, OUT OF REACH AND SIGHT OF CHILDREN AND UNTRAINED PERSONS. Safe and secure storage of your firearm and ammunition are your responsibility.

NEVER LEAVE THE KEY TO THE LOCK FOR YOUR FIREARM WITH THE STORED FIREARM!

NEVER ASSUME THAT A "HIDING" PLACE IS A SECURE STORAGE METHOD. Others may be aware of your storage location or come upon it by chance. It is your personal responsibility to use common sense when storing your firearm and ammunition and to always make sure they are not accessible to children or other unauthorized persons.

NOTE: Do not store your firearm in an air-tight container, and do not seal or attempt to seal the barrel to exclude dust, as the internal steel surface is more likely to rust or corrode by doing this.

BEWARE OF BARREL OBSTRUCTIONS. Be sure the barrel is clear of obstructions before shooting. Mud, water, snow or other objects may inadvertently lodge in the barrel bore. A small obstruction can cause a dangerous increase in pressure and may damage your firearm and cause injury to yourself and others.

BEFORE CHECKING FOR A BARREL OBSTRUCTION, BE CERTAIN YOUR FIREARM IS COMPLETELY UNLOADED.

After assuring yourself that the firearm is completely unloaded, open the action and look through the barrel to be sure it is clear of obstructions. If an obstruction is seen, no matter how small it may be, clean the bore with a cleaning rod and patch as described in the **CLEANING** section of this owner's manual.

BE SURE ALL ACCESSORIES, SUCH AS SLINGS, SCOPES AND OTHER ACCESSORIES ARE COMPATIBLE WITH YOUR PARTICULAR FIREARM AND THAT THE ACCESSORIES DO NOT INTERFERE WITH ITS SAFE OPERATION.

It is your responsibility to understand and follow all of the instructions in the safety manual that accompanied your firearm, as well as those which may be supplied with your ammunition and any accessory.

NEVER DISASSEMBLE YOUR FIREARM BEYOND THE FIELD STRIPPING PROCEDURE OUTLINED IN THIS MANUAL. Improper disassembly or reassembly of your firearm may be dangerous and can lead to serious injury or death.

NEVER MANIPULATE, ADJUST OR CHANGE ANY OF THE INTERNAL COMPONENTS OF YOUR FIREARM UNLESS SPECIFICALLY INSTRUCTED TO DO SO IN THIS MANUAL. Improper manipulation of any other internal component may affect the safety and reliability of your firearm and may cause serious injury or death.

NEVER ALLOW ANY ALTERATION OR REPLACEMENT OF PARTS IN YOUR FIREARM UNLESS PERFORMED BY A QUALIFIED GUNSMITH USING AUTHORIZED PARTS. If you do otherwise, improper functioning of your firearm may occur and serious injury or death and damage to property may result.

GUN PARTS


An illustration and list of part names are included in this manual. Please note that not all parts are available for sale. Those parts which are available should be installed by a licensed gunsmith. When ordering parts, please give part name and part number.

Important: If you make unauthorized adjustments or use unauthorized parts, Henry Repeating Arms Company will not assume responsibility for the proper functioning of the firearm.

THIS GUN IS MANUFACTURED TO PERFORM PROPERLY WITH THE ORIGINAL PARTS AS DESIGNED. IT IS YOUR DUTY TO MAKE SURE ANY PARTS YOU BUY ARE INSTALLED CORRECTLY AND THAT NEITHER REPLACEMENTS NOR ORIGINALS ARE ALTERED OR CHANGED. THIS IS WHY WE SAY TAKE IT TO A LICENSED GUNSMITH STATION. YOUR GUN IS A COMPLEX TOOL WITH MANY PARTS THAT MUST RELATE CORRECTLY TO OTHER PARTS. PUTTING A GUN TOGETHER WRONG OR WITH MODIFIED PARTS CAN RESULT IN A DAMAGED GUN, DANGER, AND INJURY OR DEATH TO YOU AND OTHERS THROUGH MALFUNCTION. ALWAYS LET A QUALIFIED GUNSMITH WORK ON YOUR GUN AND CHECK ANY WORK YOU THINK WAS NOT PERFORMED BY A GUNSMITH.

⚠ WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov/product.

ILLUSTRATION OF PARTS

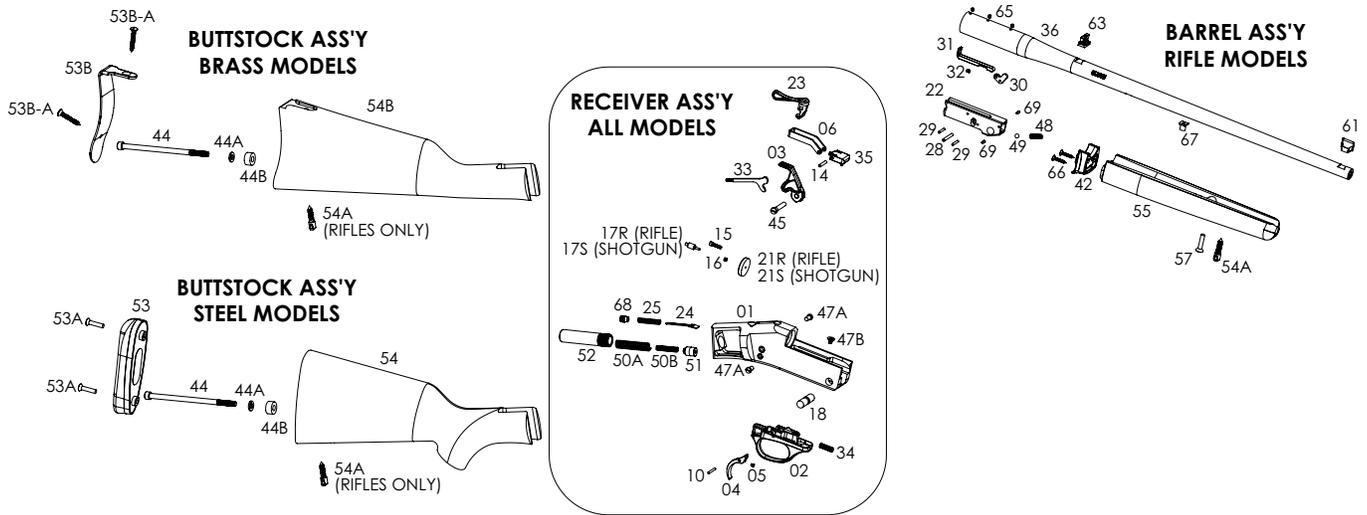

LIST OF PARTS

- | | | |
|---------------------------------------|--------------------------------------|---|
| 01 Receiver | 31 Ejector/Extractor | 53b Buttplate |
| 02 Trigger Guard | 32 Ejector Spring | 53b-a Buttplate Screws |
| 03 Hammer | 33 Hammer Spring Guide | 54 Buttock, Steel Receiver |
| 04 Trigger | 34 Locking Bar Spring | 54a Swivel Screw |
| 05 Trigger Spring | 35 Locking Bar | 54b Buttock, Brass Receiver |
| 06 Locking Bar Linkage | 36 Barrel | 55 Forearm |
| 10 Trigger Pin | 42 Forearm Cap | 56 #10-32 X .75" Oval Hd Machine Screw |
| 14 Locking Bar Pin | 44 1/4-20 Socket Hd Cap Screw | 57 #10-32 X .88 Oval Hd Machine Screw |
| 15 #5-44 X .50" Shcs | 44a Lock Washer | 59 Choke Tube Wrench |
| 16 Firing Pin Spring | 44b Flat Washer/Spacer | 60 Choke |
| 17 Firing Pin | 45 Hammer Screw | 61 Front Bead |
| 18 Barrel Pivot Pin | 47a Trigger Guard Screw | 63 Rear Sight |
| 21 Firing Pin Retention Insert | 47b #8-32 Button Hd Cap Screw | 64 Screw, Front Sight Base |
| 22 Barrel Block | 48 Ball Detent Spring | 65 #6-48 Dummy Screws |
| 23 Release Lever | 49 Ball Detent | 66 #6 Wood Screws |
| 24 Release Lever Return Guide | 50 Hammer Springs | 67 T-Nut, Forearm Support |
| 25 Lever Spring | 51 Hammer Spring Piston | 68 Release Lever Guide Screw |
| 28 Ejector Release Pin | 52 Rec/Buttock Coupler | 69 .094 x .25 Slotted Pin |
| 29 Barrel Block Anchor Pins | 53 Recoil Pad | |
| 30 Ejector/Extractor Release | 53a Recoil Pad Screws | |

SERVICING AND REPAIR

If you believe that your Henry rifle requires repair or adjustment, we suggest that you first contact our Customer Service by visiting the “Contact Us” page on our website, or by phone at 201.858.4400. It may be a problem that we can resolve by phone or by sending a replacement part. For international customers please visit the “Contact Us” page on our website for instructions.

In the unlikely event that your firearm requires adjustments or repair, please make certain that it is unloaded and send it to us at the following address:

HRAC Wisconsin
107 W. Coleman Street
Rice Lake, WI 54868

Att: Repair Dept.

Enclose an explanation of the problem in as much detail as possible.

Make certain to include your complete name, address, phone number and serial number. Make sure your firearm is packaged to prevent it from being damaged. The package should be insured to protect against LOSS OR THEFT.

DO NOT INCLUDE "HENRY REPEATING ARMS" IN THE ADDRESS ON THE PACKAGE, IN ORDER TO PREVENT AN INQUISITIVE THIEF FROM BEING ATTRACTED TO IT BY SUCH INFORMATION.

YOU CAN USE THE ORIGINAL BOX FOR RETURN, HOWEVER, YOU SHOULD MAKE SURE IT IS WRAPPED IN A BROWN OR OTHER COLORED PAPER AS TO NOT INDICATE THAT THE BOX CONTAINS A FIREARM. THIS HELPS TO MAINTAIN THE CONFIDENTIALITY OF YOUR RIFLE TO ENSURE IT GETS BACK TO US SAFELY.

NEW PRODUCTS FROM HENRY

Henry Repeating Arms Company will endeavor to introduce and manufacture other fine firearms, all made in America, of high quality and at affordable prices.

Telephone: **201-858-4400** • Fax: **201-858-4435** • Website: **www.henryusa.com**

SOCIALIZE WITH HENRY AND HENRY OWNERS

Keep up to date with new inventions and products from Henry as well as meet other Henry owners around the country by joining the conversation and liking our social media accounts:

 www.facebook.com/henryrepeating

 @Henry_Rifles

 @HenryRifles

 www.youtube.com/c/HenryriflesUSA

Be the first to know about new products and events by subscribing to our e-mail list: www.henryusa.com/maillinglist

HENRY CUSTOMER PHOTOS

You may already be famous, but if not, we invite you to send a photo with your Henry for a possible website appearance to: info@henryusa.com

HENRY ACCESSORIES

Made in America, just like our rifles! Find apparel, slings, scope mounts, gun cases, display cases and more at www.henrypride.com

History and Thank You



Benjamin Tyler Henry.
His invention: The Henry Rifle.

Thank you for purchasing your new Henry Firearm. We are proud to have crafted this firearm for you in the great tradition of the Henry Repeating Rifle which dates back to 1860 when the first effective, lever-action repeating rifle was developed by Benjamin Tyler Henry. The lever action is America's unique contribution to international firearms design; We go to great lengths to provide the highest quality of design and craftsmanship for each and every one of our American-Made firearms. You are now a part of the Henry family, and we are thankful to have your support. Your new firearm should provide you and your family with many years of safe enjoyment and pride of ownership.

It is imperative that these cautions and operating instructions be thoroughly studied and understood before using your new firearm, in order to ensure proper and safe gun handling. Failure to follow these cautions, warnings and operating instructions could result in damage to your gun or to other property or could result in injury or death to yourself or to others.